



## BoostedNW GM2 adapter install guide.


We highly recommend sending your ECM in for the \$25 install service as removing the existing PROM and socket can be troublesome for some without the proper skills/tools and could result in the damage of your ECM (lifted pads, broken traces, etc. That will require professional repair that will likely cost more than \$25)

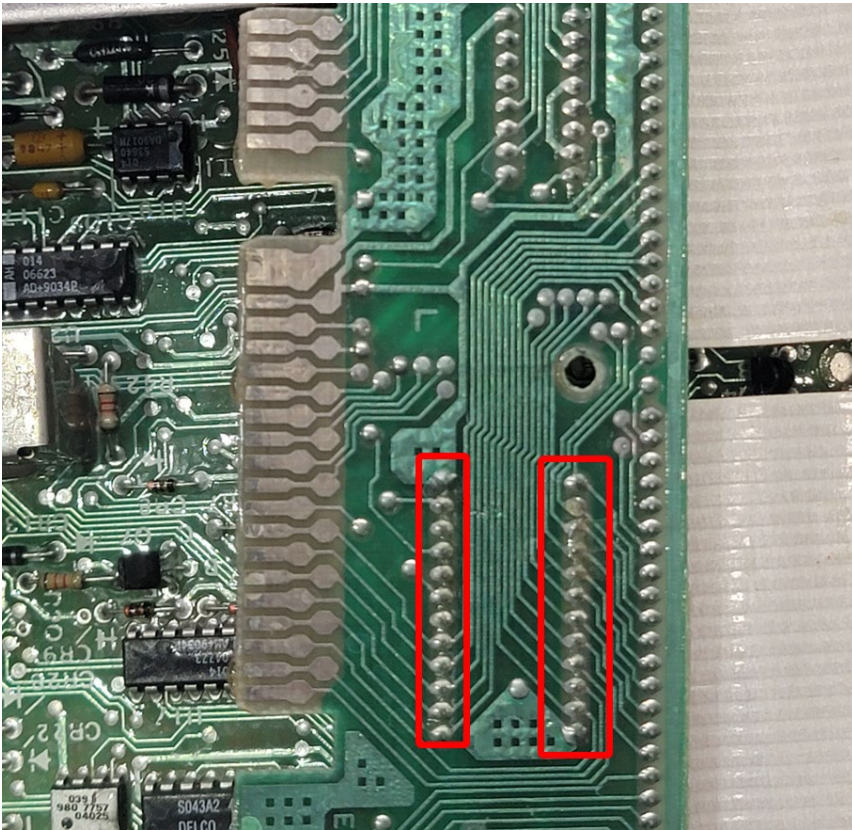

Open the ECM, loosen the board with the PROM and flip it over, desolder all the points shown above.

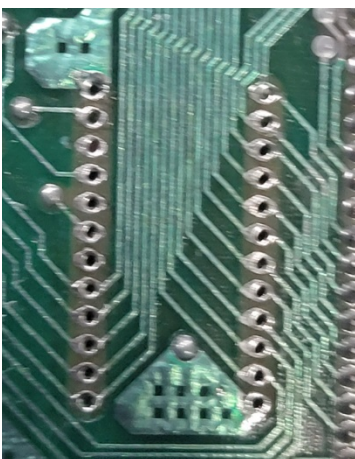

The holes should be wide open like this ready for the GM2 socket to be installed.

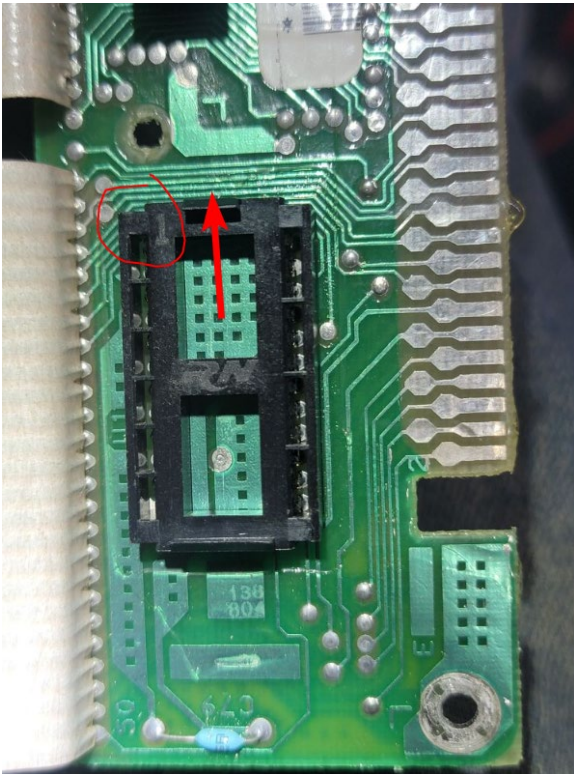

Note the direction (pin 1) of the previous socket and the way the PROM was installed with NOTCH at the top as arrow indicates.

