



Step 1

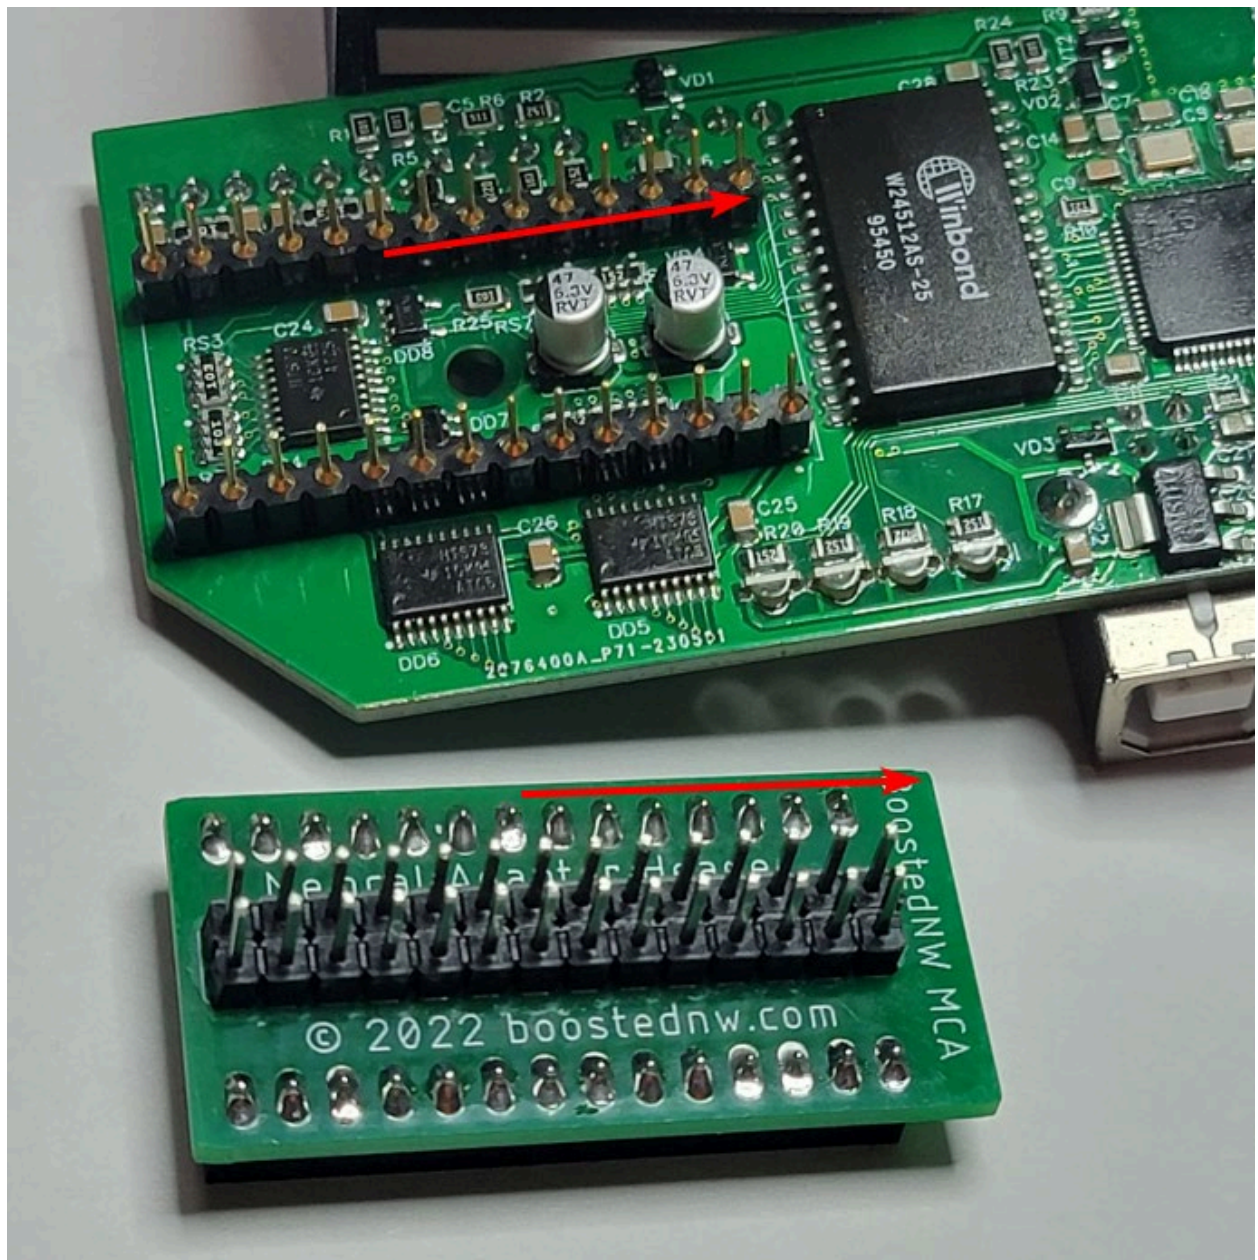

Step 2, the cn2 wire goes on with the yellow on the right pin in this position

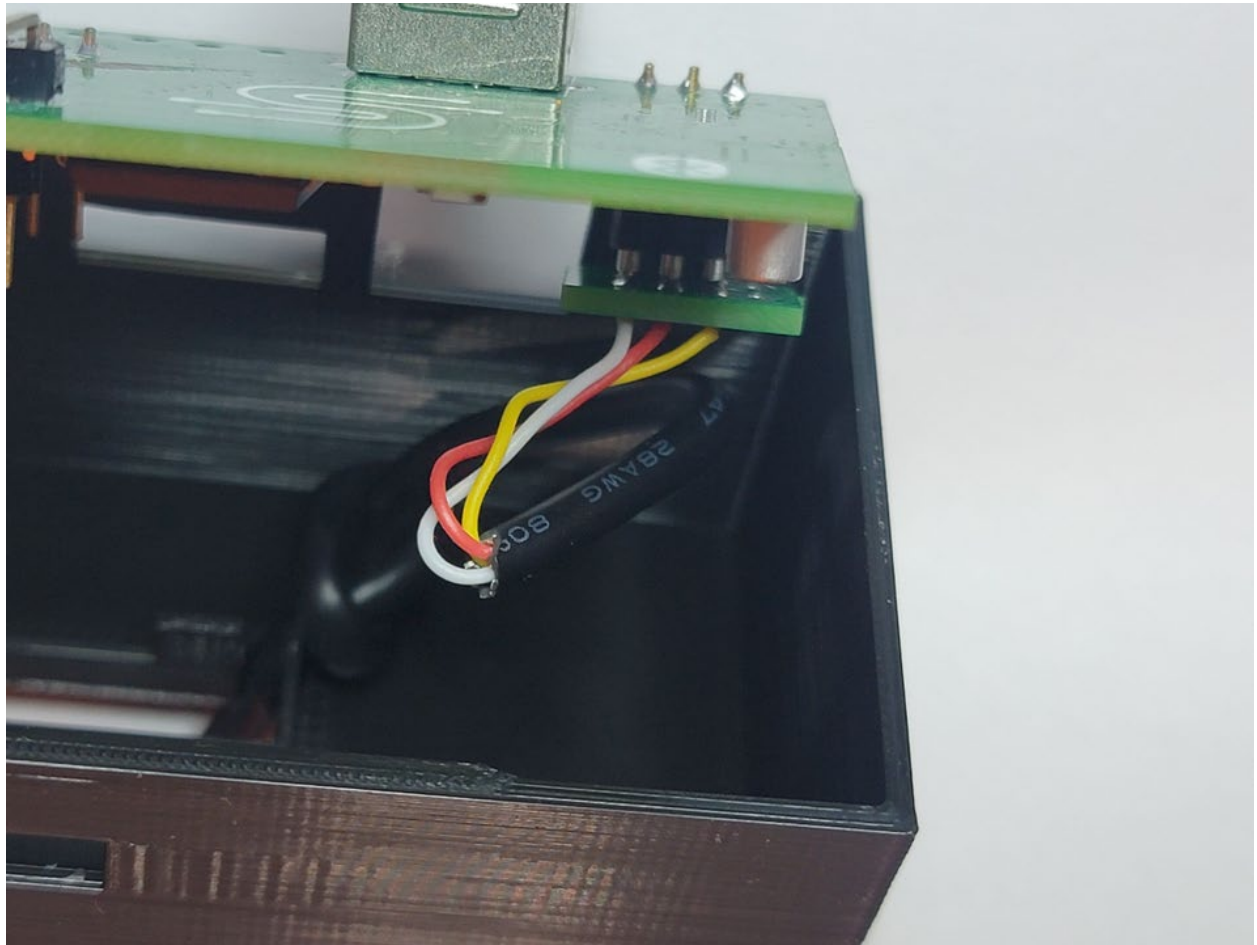


Step 3, you insert the snake like this, with pins through the hole while guiding the bottom pins through the bottom slot.. It takes a little pushing towards those side pins to get the bottom pins through the hole that is fine, it won't hurt anything it's just made so it has a nice tight fit.





Step 4. should look like this, before you go to stuff it all in the box

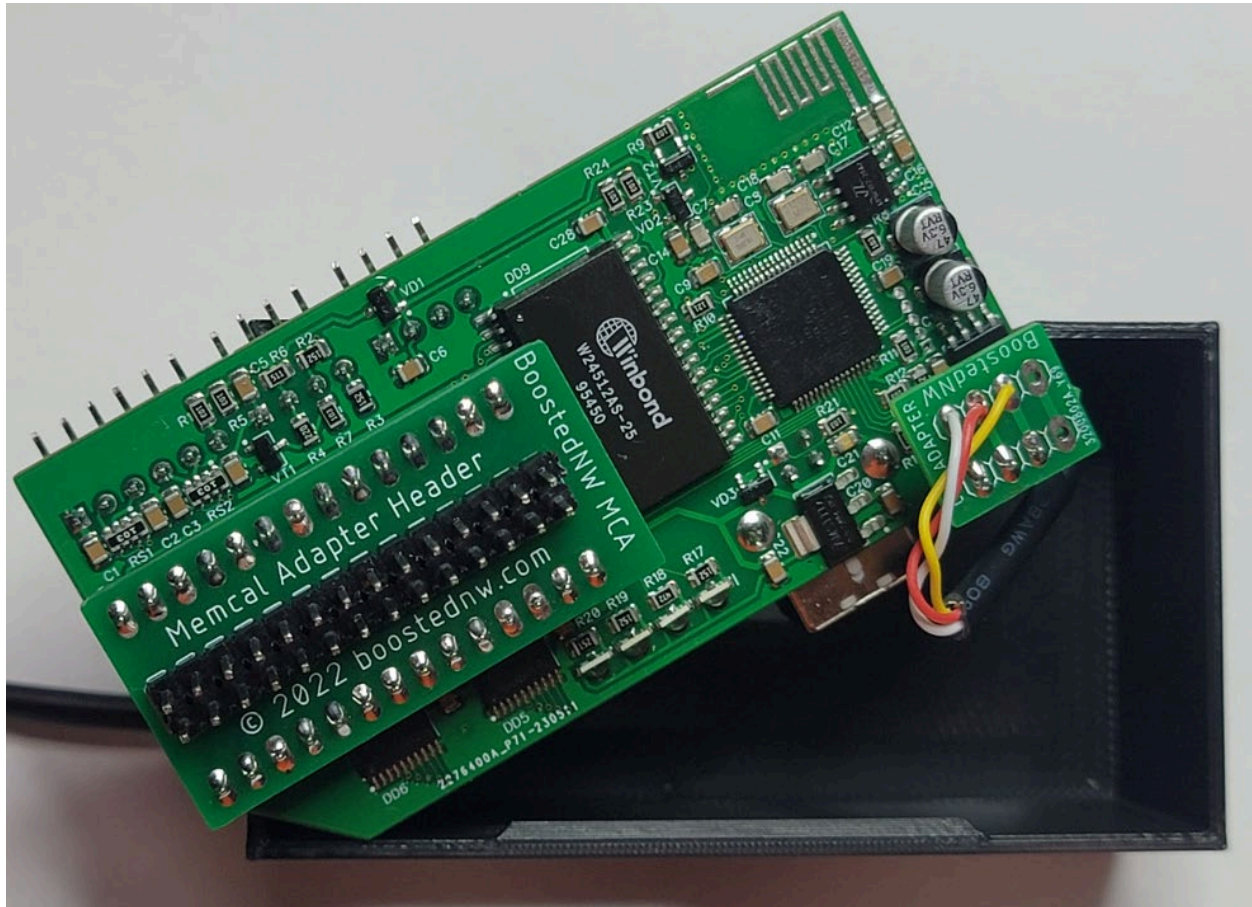


Step 5. this is the part that will be tight to get it over this plastic part, just wiggle, and push it towards the side pins and it will get over that part of plastic.





Step 6. Then when you got it in and like this, the cables ready to go on. The cable takes a little alignment as well you gotta align the tab with the cutout on the case, then move the snake/adaptor around until the pins line up with the cable.

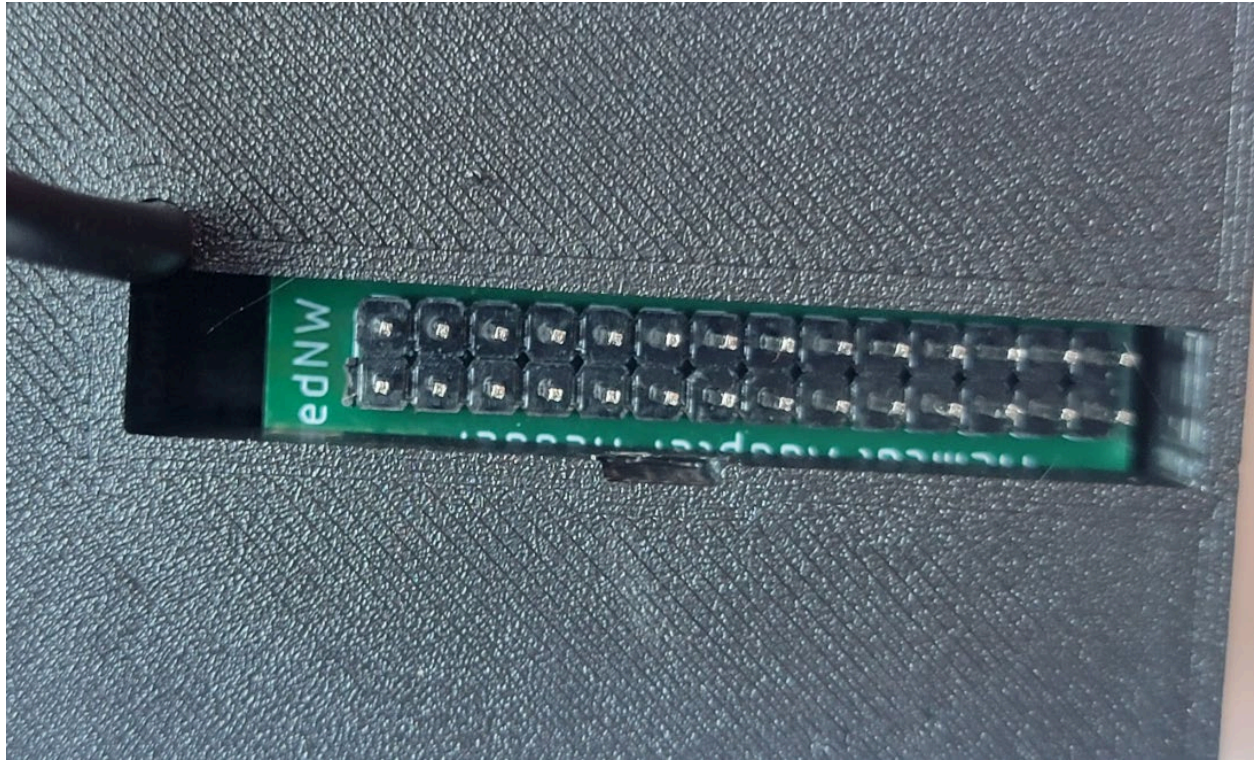





Another tip would be to push towards the analog pin side, with the pins through the hole, move them up towards the top of the hole as much as you can that will get you more room on the bottom inside where the pins wont go over the plastic edge

